


# WT-1010C2


## Usual Manual Simple Setting for GSM Alarm



# Wiring Diagram

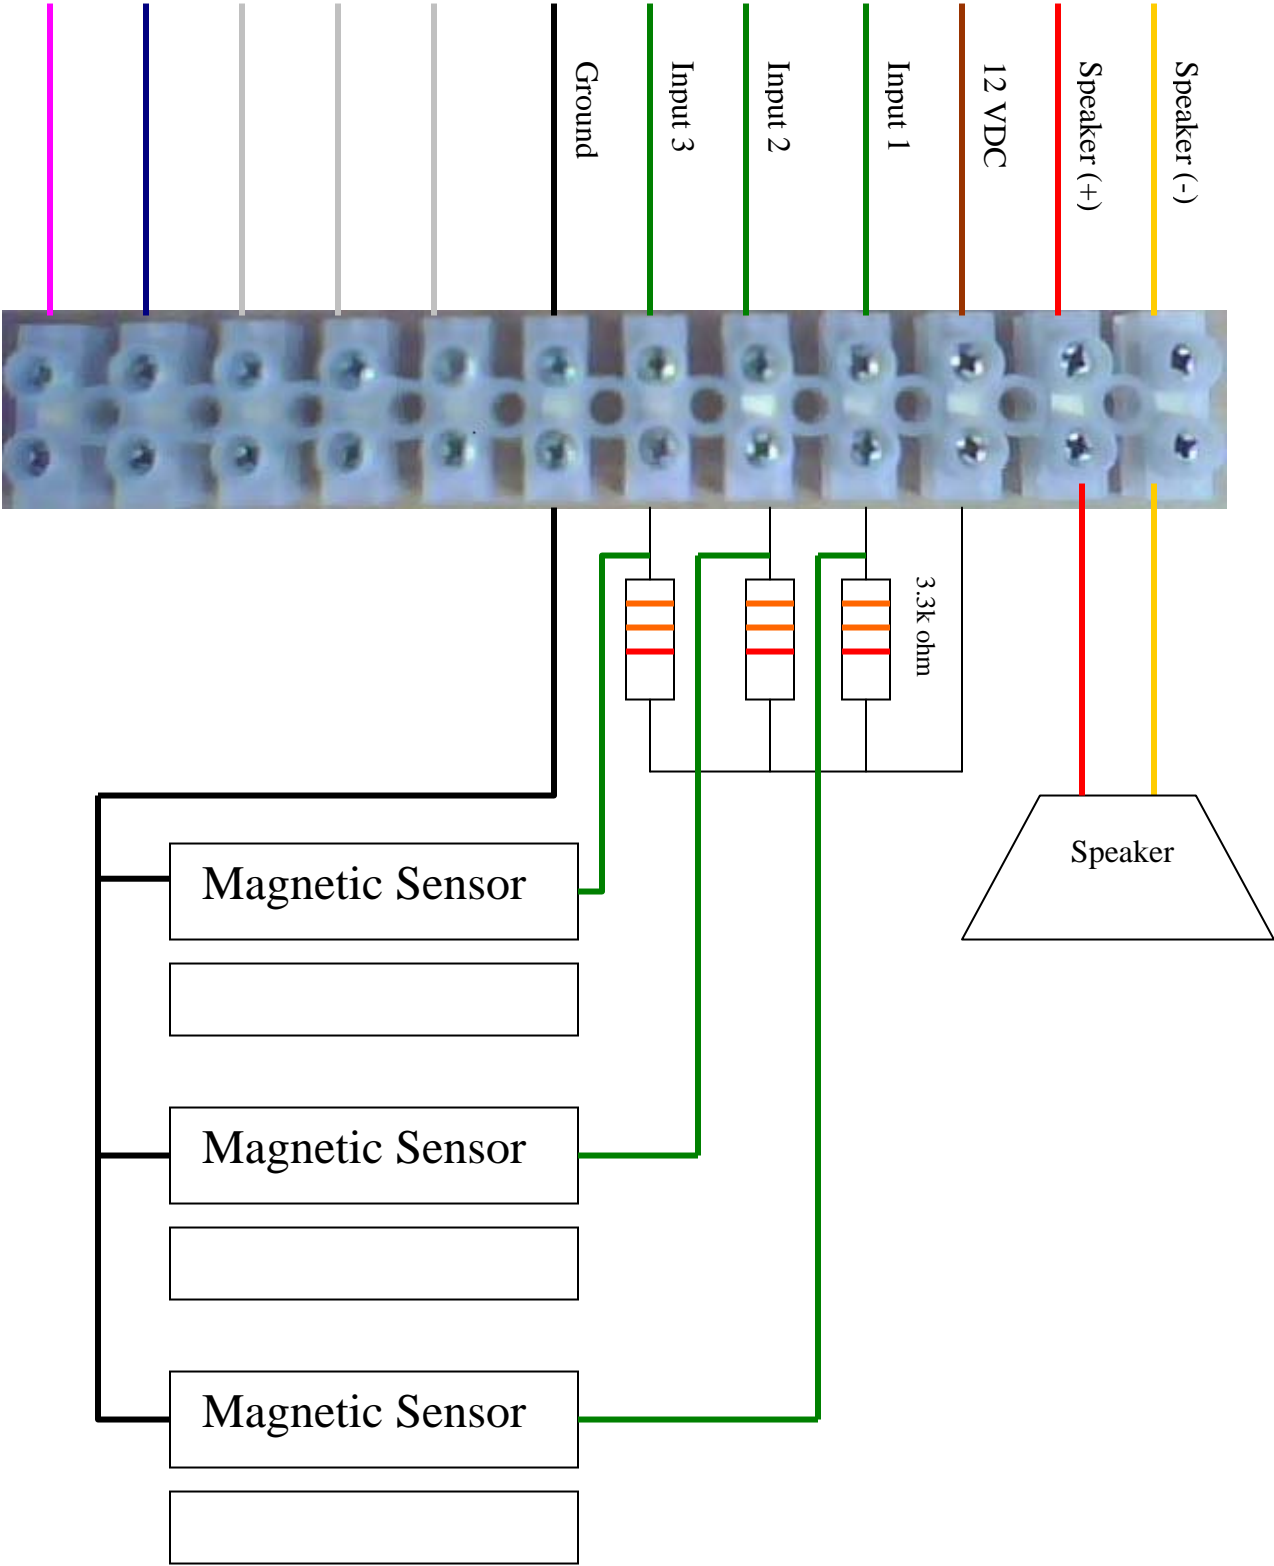

# Programming

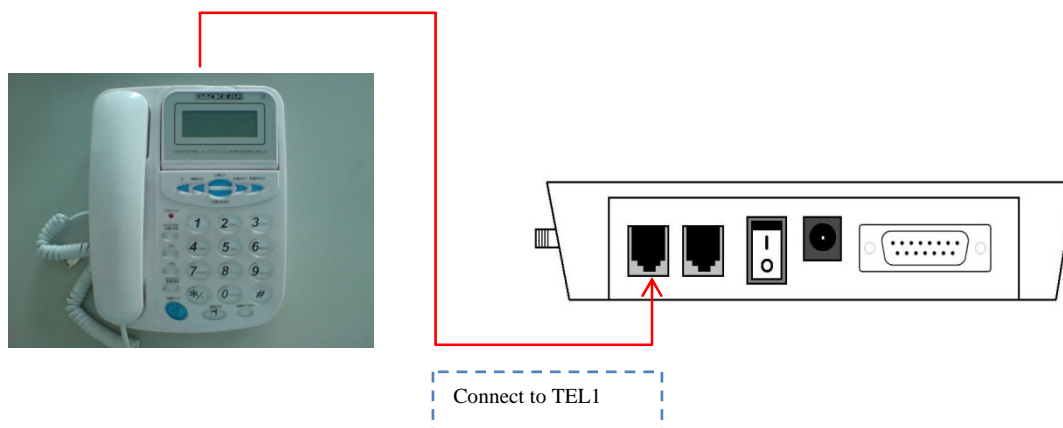

## 1) Enter Programming Mode

Pick up the handset or press hands free, press **\*\*123456#** to enter programming mode. If the password has entered correctly, you should see **"HAND FREE..."** displayed on WT-1010C2 screen.

## 2) Reset the Main Unit

To reset the unit, you can press **\*15\***  
Then press **1#** to reset.

## 3) Programming the Administrator/Central Station Number

Continue pressing **\*1\*** then programming the administrator number and Ended with #

Example: **\*1\*12334567#** (1<sup>st</sup> number)

**\*2\*22233344#** (2<sup>nd</sup> number)

You may continue to program administrator number 2, 3, 4, 5, 6, 7 and 8 by Pressing **\*2\*** , **\*3\*** , **\*4\*** , **\*5\*** , **\*6\*** , **\*7\*** or **\*8\***

## 4) Setting for Calling a group of administrator numbers

To program the unit to dial a certain group of numbers when PSTN/AC failed or Auto Test, you can press **\*29\*** to proceed.

For example: If program **2** Administrator number so the calling group will set as

**\*29\*2#**.

If **3** Administrator so the calling group will set as **\*29\*3#**.

5) **Turn on the function of Inputs**

To turn on the function of input number 1, you can press **\*24\*** to proceed.

Example: Setting the input 1 to generate an SMS, call the administrators and sound the audible alarm when it triggered.

Simply input

**10110#**

<b>IN1: OP: 1 CL: 0 AL: 1</b>
<b>CA1: 1 CA2:0 OK</b>

**Note:** *"OP" (NC) stands for generation of SMS when input triggered (Open)*

*"CL" (NO) stands for generation of SMS when input triggered (Close)*

*"AL" stands for sounding the audible alarm when input triggered*

*"CA1" (NC) stands for calling the administrators when input triggered (open)*

*"CA2" (NO) stands for calling the administrators when input triggered (close)*

*Value: ON (1) or OFF (0)*

You may continue to activate relay 2 or relay 3 by pressing **\*25\*** or **\*26\***

6) **Setting the Alarm Time for Audible Alarm**

To set the alarm time for audible alarm, you can press **\*33\*** to proceed.

Example: set the audible alarm to sound for 1 hour when triggered

**\*33\*03600#**

*Note: The alarm time must entered in 5 digits (00001 – 65535)*

7) **To Activate the Input (Zone)**

To activate the input **\*35\***

1 = On

0 = OFF

8) **Setting the Auto Answer**

To set the Auto Answer press **\*45\***

1 = on

0 = off

Example: When turn on the auto answer; you can use mobile phone call to the unit to control Arm and Disarm.

Call to the GSM and press the mobile keypad **\*\*123456\*** (Arm)

**\*\*123456#** (Disarm)

9) **Arm and Disarm**

Press the password **\*\*123456#** then continues to press **\*10#**

**1** = Arm

**0** = Disarm

When Arm the alarm also can set a delay time is 0 – 60 second.

10) **Setting the Recipient that will receive Alert Messages**

The unit can send text alerts to 1 or all 8 of the programmed administrator's numbers.

Press **\*18\*** to proceed.

**Example:** To turn on this function for all recipients, press **11111111#**

***Note:** The input for this setting is an **8** digits value: ON (**1**) or OFF (**0**) only. Each of them represents administrator 1 – 8. Default Value: **10000000***

11) **Changing the Programming Mode**

To change the 6 digits programming mode password, you can press **\*0\*** to proceed.

Key in the new password and press enter **#**

12) **Using SMS to Arm and Disarm**

Type the text then sms to the unit

\*DARM#1 = Arm

\*DARM#0 = Disarm

13) **Editing the Inputs Alert Messages (Up to 50 Characters) via SMS**

Text Command:

**\*USE[N]#XXXXXX**

N stands for Input number **1 – 3**

XXXXXX... stands for alert message content

**Example:**

If you want the alert message to display **"Garage Opened!"** when input **1** triggered; you would send the following SMS message to the unit.

**\*USE1#Garage Opened!**

Return Message

**USE1=Garage Opened!**